

SOFTWARE INSTALLATION INSTRUCTIONS

IMPLEMENTATION PACKAGE

The AuditGard Software implementation package includes:

- 707013 AuditGard Software Install CD
- 42145 Programming/Audit cable (3125 Entry Device)
- 43097 Programming/Audit cable (for 3190, 3750-K, and 8130 Entry Devices)
- 707010 USB Interface Adapter (or 42150 Serial Interface Adapter)

IMPORTANT NOTE: *The system driver for the USB Interface Adapter will be installed after the application software. **DO NOT insert the adapter into the PC until the software installation is complete.***

If any of the above items are missing, contact your point of sale.

SYSTEM REQUIREMENTS

Minimum hardware and software requirements for the AuditGard Software:

- IBM compatible PC (Intel® Pentium® 4 or compatible processor) capable of running Windows® with an available USB or serial port
- 512 MB RAM (1GB preferred. Refer to your operating system requirements.)
- CD-ROM or DVD-ROM Drive
- Hard Disk Drive with at least 6.5 MB available
- Super VGA (1,024x768) or higher-resolution video adapter and monitor
- Windows XP Professional 32-bit (Service Pack 3 or greater), Windows Vista 32-bit or 64-bit (Business Edition), and Windows 7 Professional 32-bit or 64-bit
- Microsoft Mouse or compatible pointing device

NOTE: *Adobe® Reader requires an additional 335 MB of available hard-disk space and Microsoft Internet Explorer 6.0 or higher.*

SOFTWARE INSTALLATION AND SETUP

1. Insert the AuditGard Install CD into the appropriate CD-ROM or DVD-ROM drive of the PC.

NOTE: *Do not remove the Installation CD until instructed to do so.*

2. The Install CD is set to AutoRun. If AutoRun does not initiate, complete the following steps:
- a. Select the **Start** icon in the lower left of the Windows screen.
 - b. Select the **Run** icon from the Windows menu. The Run Window will be displayed (Figure 1).

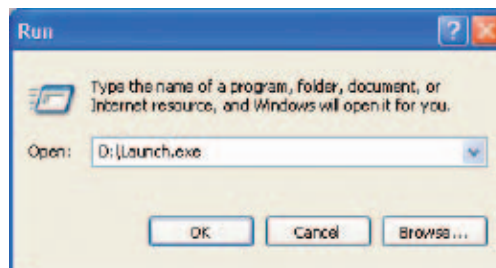


Figure 1.

- c. If necessary, change the path to point to the drive being used to install the software.
- d. Click on the **OK** button.

NOTE: *An alternate method to initiate the Installation Browser is to right-click on the **START** button, select **Explore** to open your CD-ROM drive, and then select **Launch.exe**.*

The main menu of the Installation Browser will display three Menu Options: **Install Software**, **Product Documentation**, and **Contact Us** (Figure 2).

Install Software

This menu option allows the user to install the AuditGard software and the driver for the USB Interface Adapter, if required.

Product Documentation

This menu option allows access to the product documentation for the system. All instructions for the AuditGard lock system are available on the Install CD in PDF format. Adobe® Reader is required to view and print the documents and is included on the Install CD.

NOTE: *The latest versions of LA GARD documentation are also available for download at www.kaba-mas.com.*

Contact Us

This menu option displays contact information for the LA GARD brand.



Figure 2.

UPGRADE FROM OLD SOFTWARE

If a previous version of the AuditGard Setup software or the LGView software is installed on your computer, consider the items below before converting to the new AuditGard software. If no previous software versions are installed, move to the software installation section(s) of this document.

1. Lock Setup Files

Lock setup files from the previous version of AuditGard Setup software will not transfer to the new software system.

The setup files in the new system use a different file format. Using the old information as a reference, replicate the settings using the new Setup software. *Detailed instructions on how to perform this process are provided in the RECREATE LOCK SETUP FILES section of this document.*

2. Audit Files

The previously saved audit files can be transferred to the new system. *Detailed instructions on how to perform this process are provided in the TRANSFER AUDIT FILES section of this document.*

3. Use of Previous Hardware

The new Setup and Auditing software does support the Serial Interface device (P/N 42150), but the new USB Adapter is recommended.

4. Removal of Old Software

It is recommended that the old software be removed after installing the new software and completing any required file transfers or lock setup configurations. *Detailed instructions on how to perform this process are provided in the REMOVE PREVIOUSLY INSTALLED SOFTWARE section of this document.*

INSTALL AUDITGARD SOFTWARE AND USB DRIVER

From the main menu of the Install Browser, select the **Install Software** menu item. The Install Software menu will be displayed (Figure 3).

From this menu the AuditGard Setup and/or AuditView software can be installed. The FTDI USB Driver also needs to be installed if the USB Interface Adapter is used to program or audit the lock.



Figure 3.

INSTALL AUDITGARD SETUP

To install the AuditGard Setup Software, complete the following steps:

1. Select the **Install AG Setup** menu item.

The AuditGard Setup screen will be displayed (Figure 4). The Setup Wizard is a Windows program that will guide you through the rest of the setup process.

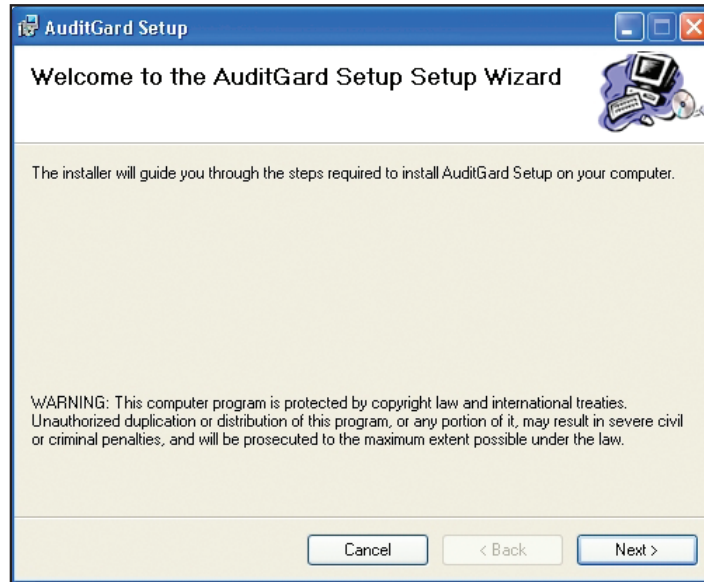


Figure 4.

2. Click on the **Next>** button to continue.

The Software License Agreement Screen will be displayed (Figure 5).



Figure 5.

3. Read the Software License Agreement, and then click on "**I Agree**" button to accept the terms of the agreement.

4. Click on the **Next>** button to continue.

The Select Installation Folder window is displayed (Figure 6) to allow you to select the program folder where the AuditGard Setup Software will be installed.

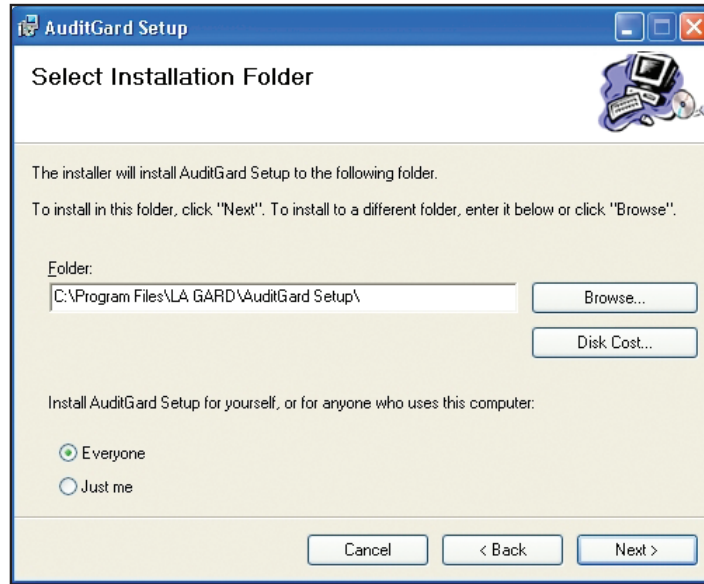


Figure 6.

5. Select the program folder to which the AuditGard Setup Software program will be added.

NOTE: The default installation directory is shown. To install the AuditGard Setup Software in another directory, click on the Browse button and select the new path. Also, the default value for who can use the software is "Everyone". To restrict the software for use by only yourself, select "Just Me".

6. Click on the **Next>** button to add the program to the designated folder.

The Confirm Installation screen will be displayed (Figure 7).

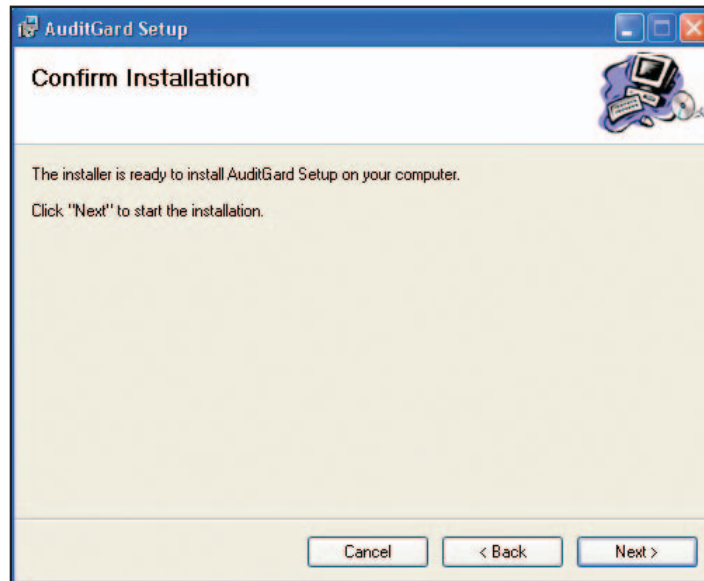


Figure 7.

7. Click on the **Back>** button to change the installation settings, or click on the **Next>** button to install the program with the designated settings.

The installation status screen will be displayed and will show several different status messages as the installation progresses (Figure 8).

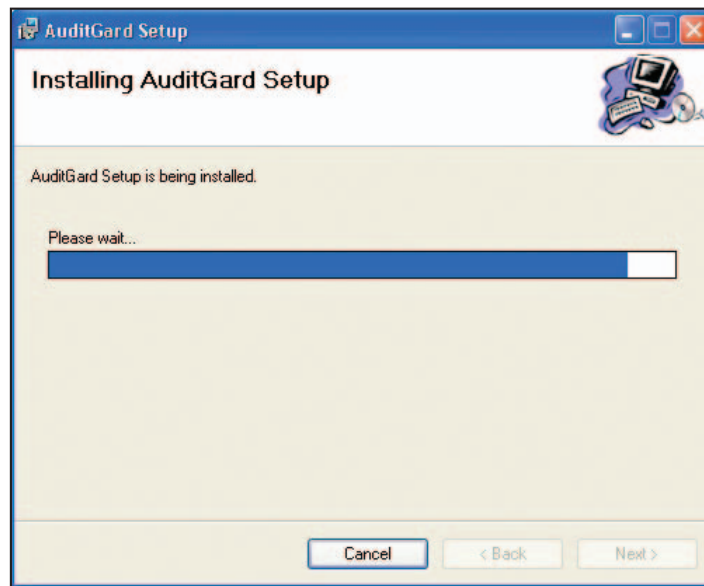


Figure 8.

The AuditGard Setup Software program will be added to the Windows Program Menu Folder, and a desktop shortcut icon will be created.

The **Installation Complete** screen is then displayed indicating that the AuditGard Setup Software program has been successfully installed (Figure 9).

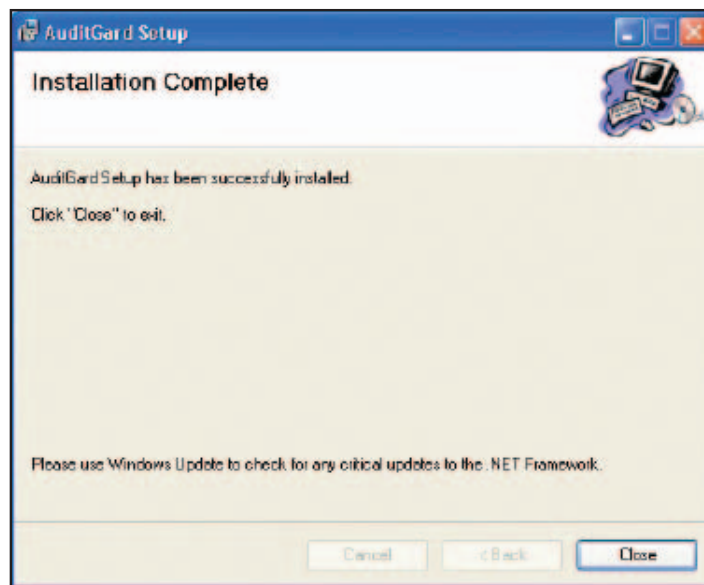


Figure 9.

8. Click on **Close**.

The AuditGard Setup Software installation is now complete.

INSTALL AUDITGARD AUDITVIEW

To install the AuditGard AuditView Software, complete the following steps:

1. Select the **Install AG AuditView** menu item.

The AuditGard AuditView Setup screen will be displayed (Figure 10). The Setup Wizard is a Windows program that will guide you through the rest of the setup process.

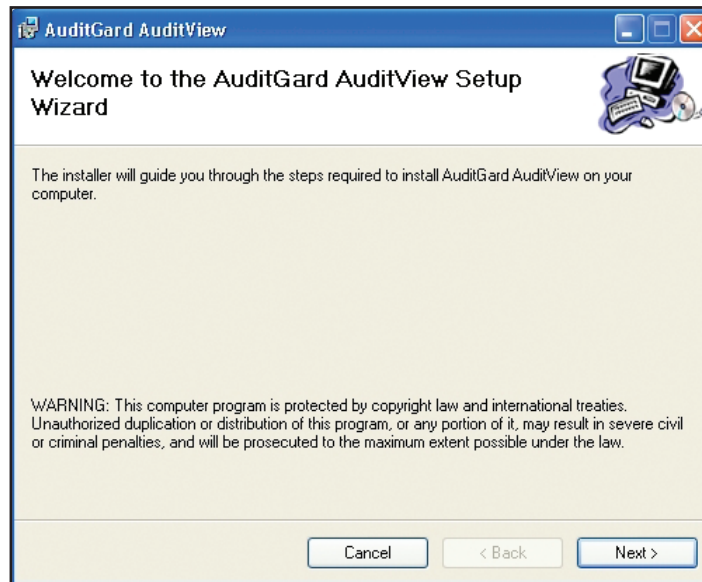


Figure 10.

2. Click on the **Next>** button to continue.

The Software License Agreement screen will be displayed (Figure 11).



Figure 11.

3. Read the Software License Agreement and then click on the "**I Agree**" button to accept the terms of the agreement.

4. Click on the **Next>** button to continue.

The Select Installation Folder window is displayed (Figure 12) to allow you to select the program folder where the AuditGard Setup Software will be installed.

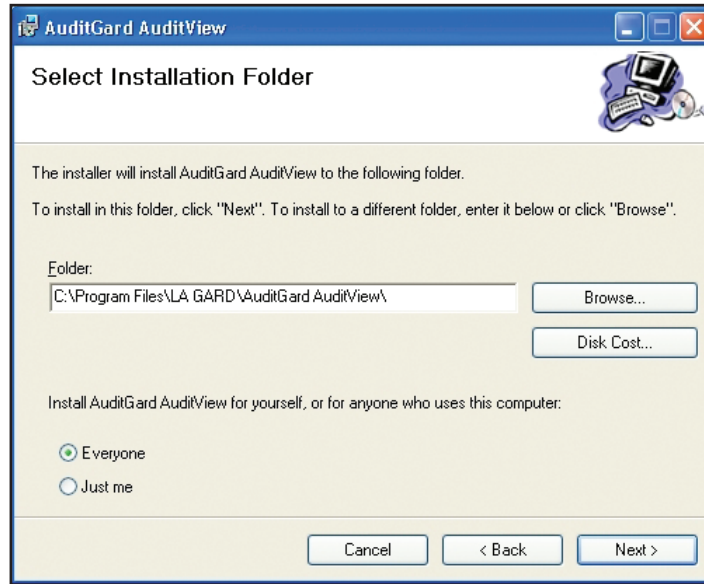


Figure 12.

5. Select the program folder to which the AuditGard AuditView Software program will be added.

NOTE: The default installation directory is shown. To install the AuditGard AuditView Software in another directory, click on the Browse button and select the new path. Also, the default value for who can use the software is “Everyone”. To restrict the software for use by only yourself, select “Just Me”.

6. Click on the **Next>** button to add the programs to the designated folder.

The Confirm Installation screen will be displayed (Figure 13).

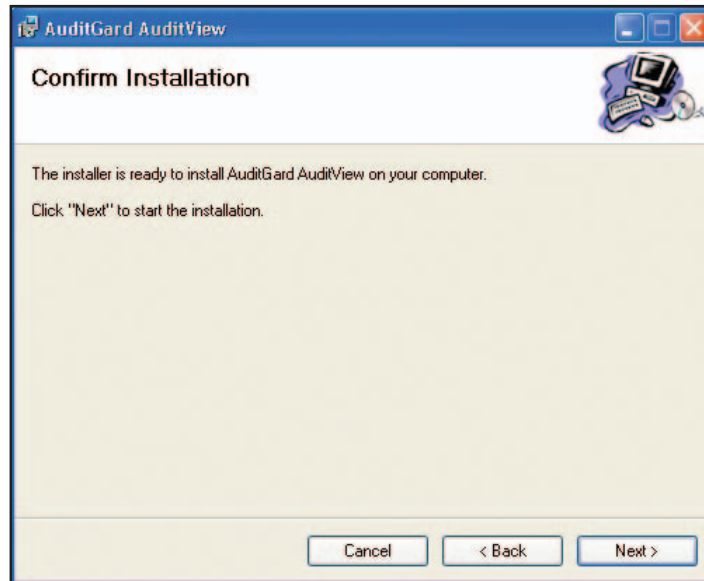


Figure 13.

7. Click on the **Back>** button to change the installation settings, or click on the **Next>** button to install the program with the designated settings.

The installation status screen will be displayed and will show several different status messages as the installation progresses (Figure 14).

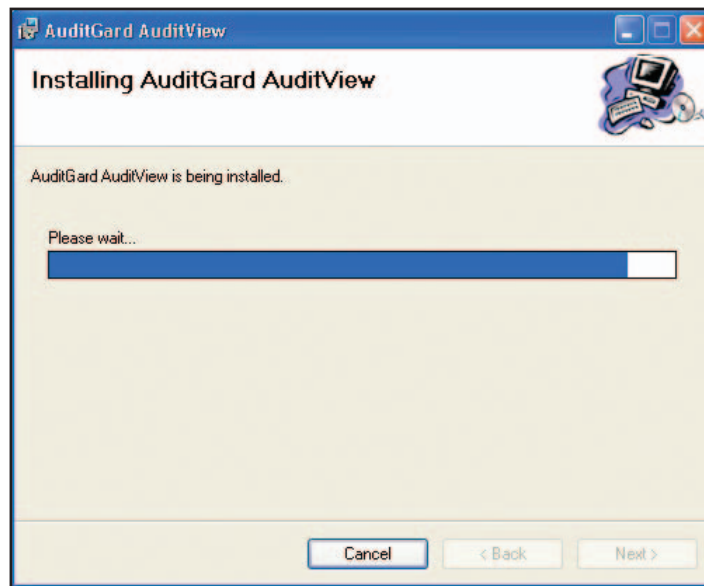


Figure 14.

The AuditGard AuditView software program will be added to the Windows Program Menu Folder and a desktop shortcut icon created.

The **Installation Complete** screen is then displayed indicating that the AuditGard AuditView Software program has been successfully installed (Figure 15).

8. Click on **Close**. The AuditGard AuditView Software installation is now complete.

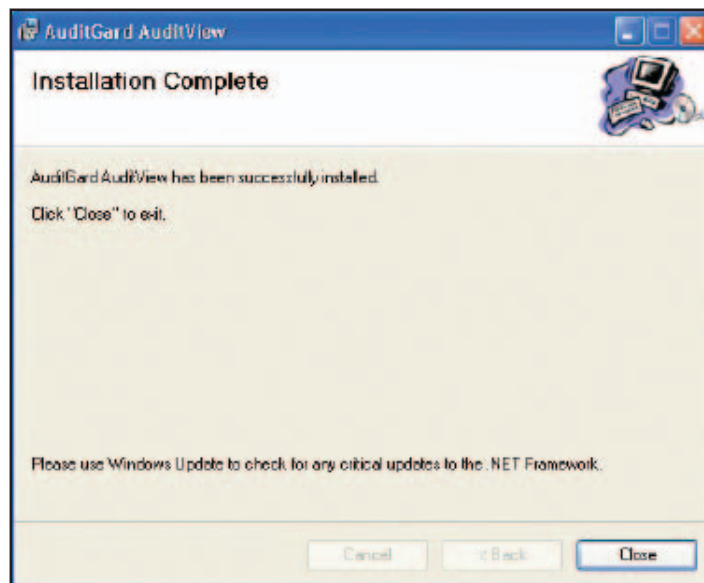


Figure 15.

INSTALL FTDI USB DRIVER & ADAPTER

To use the USB Interface Adapter (P/N 707010), complete the following steps to load the required FTDI driver and install the hardware device:

1. Select the **Install FTDI USB Driver** menu item to start the driver installation process.

A series of windows will be displayed as the installation progresses (Figure 16). The cascade of windows will close automatically once the driver installation is completed.

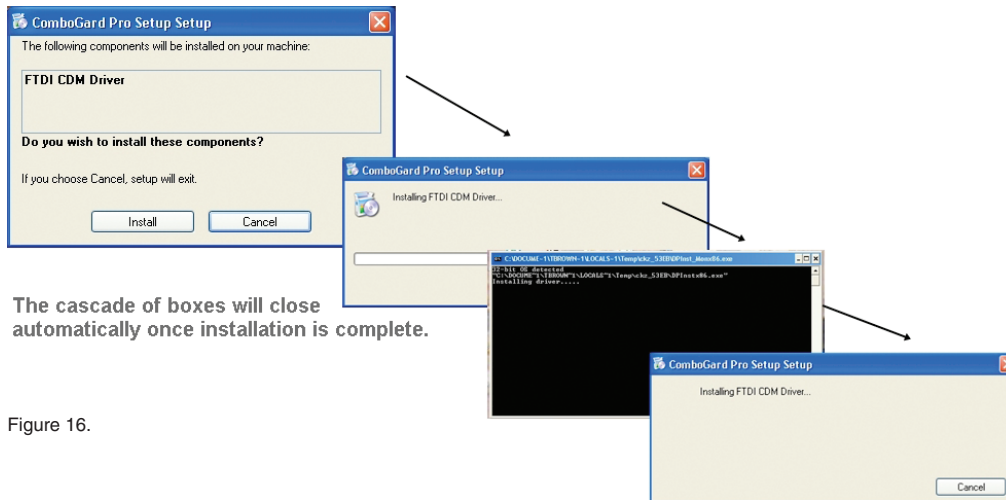


Figure 16.

2. Insert the USB Adapter into an available USB port on the PC.

The Found New Hardware message window will open and will display various messages as the new hardware device is installed. Once the installation is complete, the message window will automatically close.

3. Select **Menu** to return to the Main Menu.

4. Select **Exit** to exit the Installation Browser.

RECREATE LOCK SETUP FILES

Lock setup files from the previous version of AuditGard Setup software will not transfer to the new software system. The setup files in the new system use a different file format. To recreate the setup file, complete the following steps:

1. Open the old AuditGard Setup software.
2. Open the new AuditGard Setup software.
3. Using the old software, click the **Load** button and select the desired configuration setup (*.lgc) file (Figure 17).

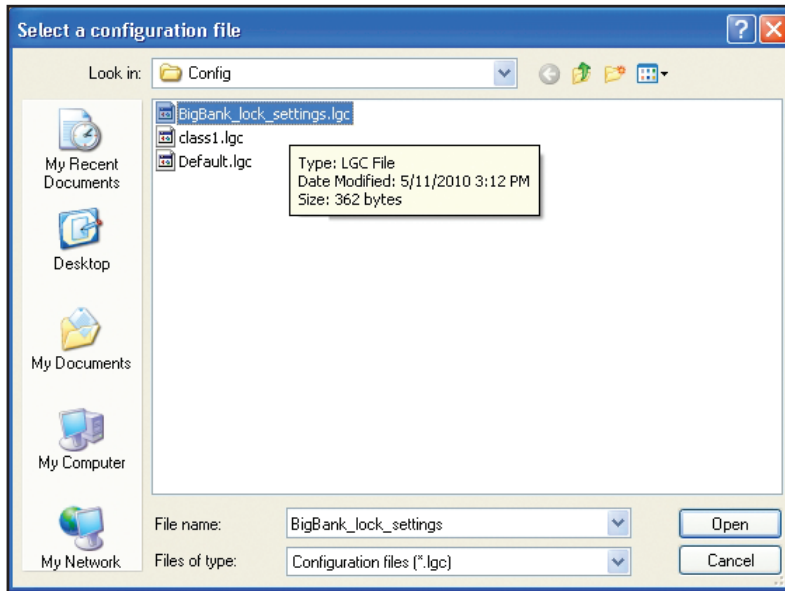


Figure 17.

4. Enter the same configuration settings into the new software (Figure 18).

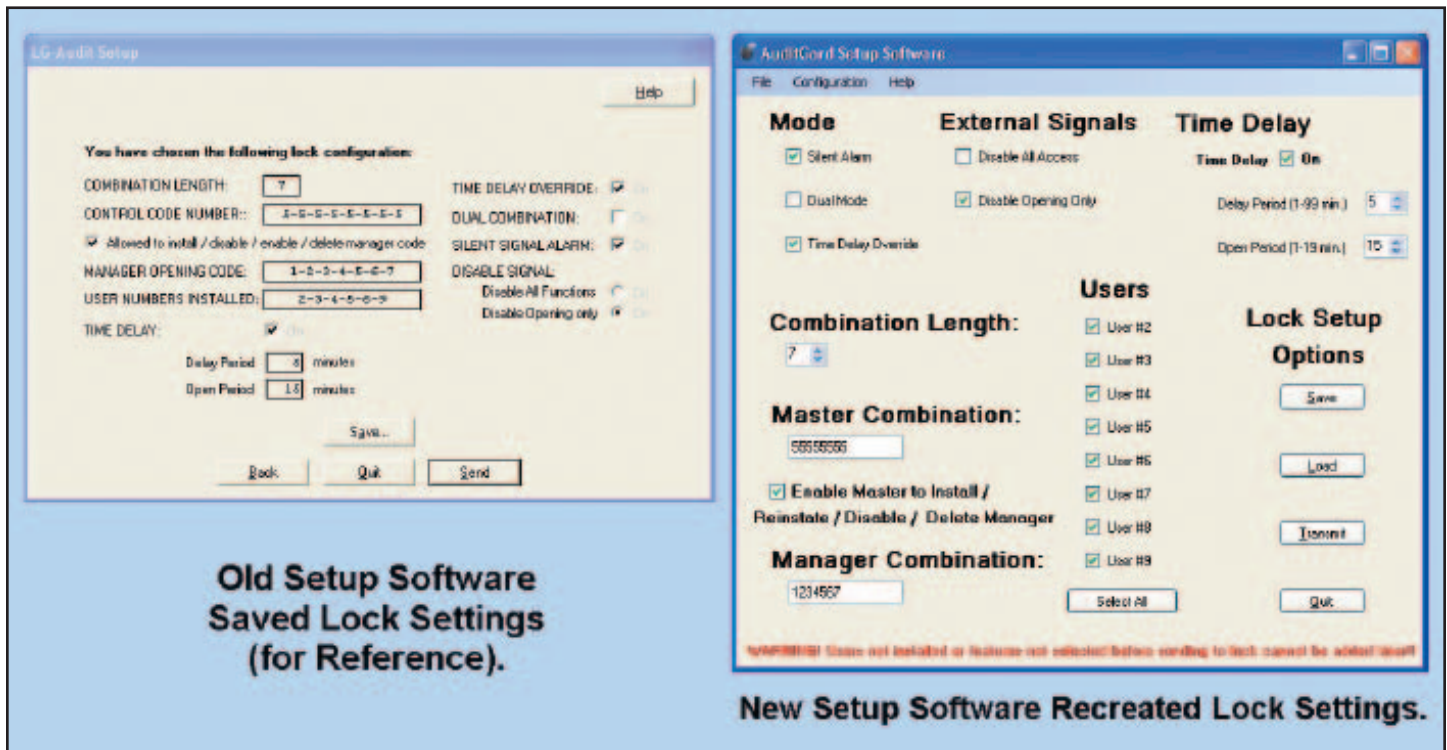


Figure 18.

5. Click on the **Save>** button

6. Name the new configuration setup (*.xml) file (Figure 19).

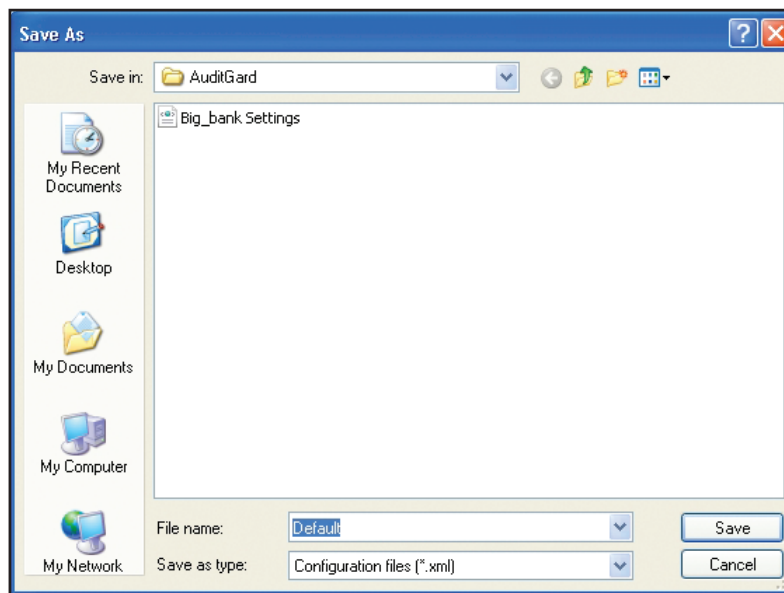


Figure 19.

7. Click **Save>** to save the locks setting in the new file format.

8. Repeat steps 3 – 7 for each of the setup files you wish to recreate.

TRANSFER AUDIT FILES

To access previously saved audit files with the new software you must copy the files to the new default audit location. The new default location is dependent on the Operating System. Audit files have a “.log” file extension.

1. Copy audit files from the old AuditGard software system. The old default location is:

C:\Program Files\LgView\Audit\

2. Transfer (paste or copy) the old audit files to the new default location for your Operating System, defined as follows:

Windows XP -> C:\Documents and Settings\All Users\Documents\AuditGard\

Windows Vista -> C:\Users\Public\Public Documents\AuditGard\

Windows 7 -> C:\Users\Public\Public Documents\AuditGard\

REMOVE PREVIOUSLY INSTALLED SOFTWARE

The old version(s) of the software should be removed after the installation of the new software, to prevent possible software conflicts. To remove the old software complete the following steps:

1. Select the **Start** icon from the Windows task bar.

2. Select the **Settings** menu item.

3. Select the **Control Panel** menu item.

4. Select **Add or Remove Programs**.

The Add or Remove Programs screen is displayed.

5. To delete a previously installed version of the AuditGard Software, select the **LgSetup** program item (Figure 20) and then click on **Change/Remove**. The program will be deleted from the list.

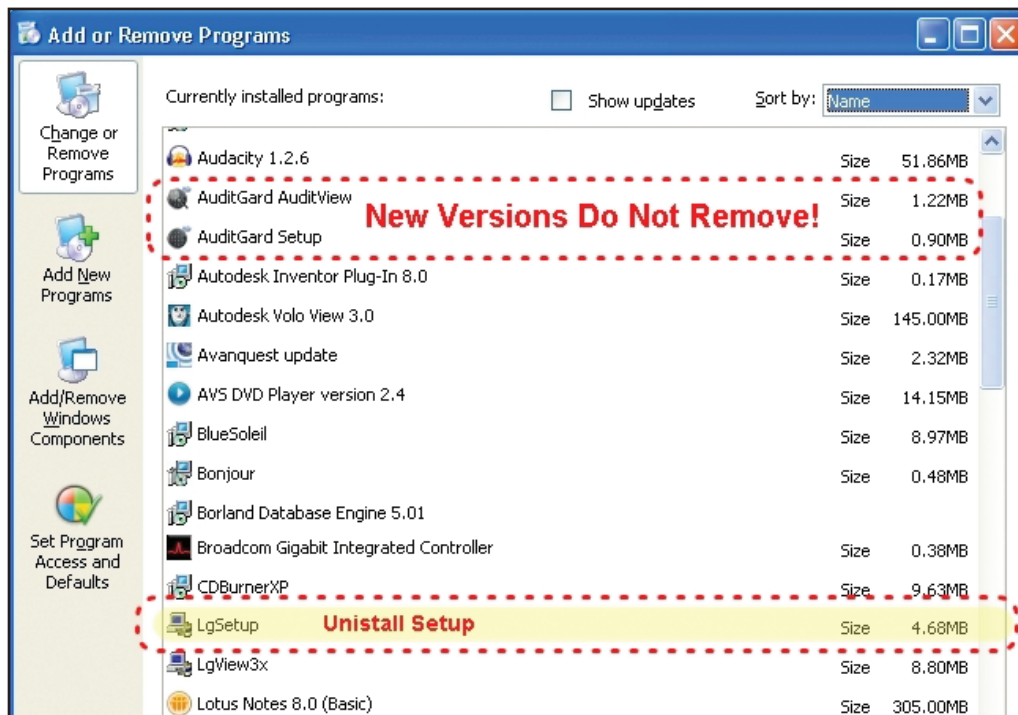


Figure 20.

6. To delete a previously installed version of the audit viewing software, select the **LGView** program item (Figure 21) and then click on

Change/Remove. The program will be deleted from the list.

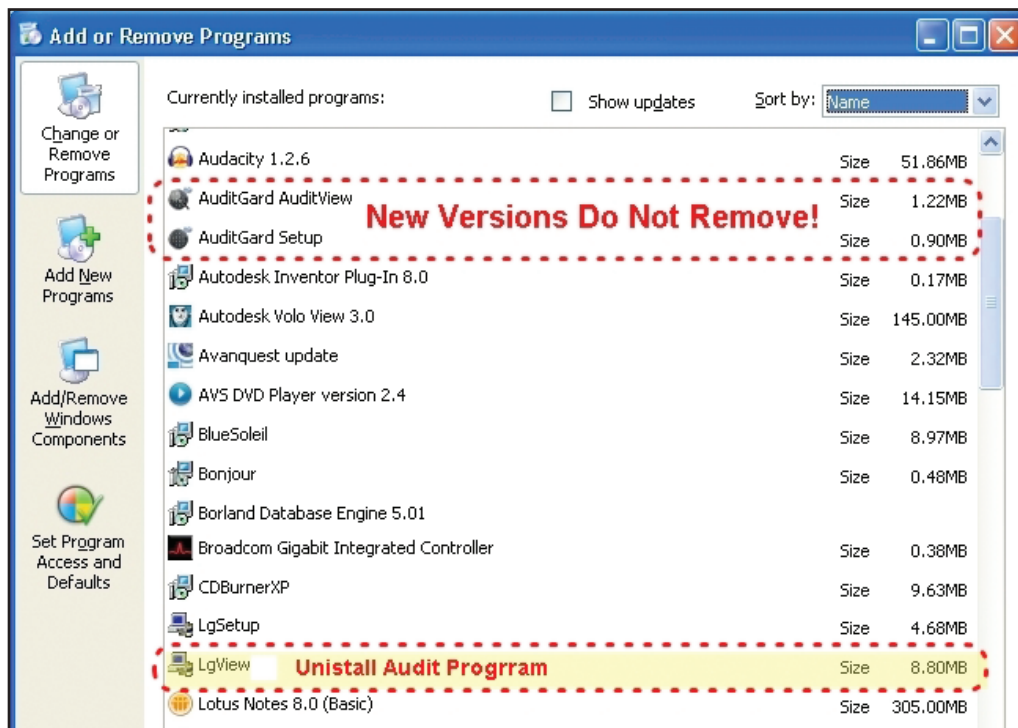


Figure 21.